


Instruction Manual

K26

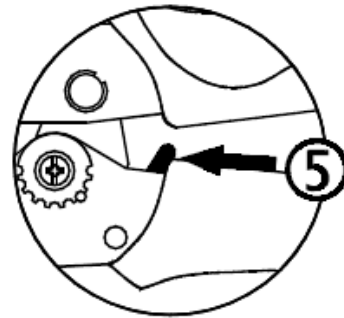

- Open the tool. Place the seal into the die nest.
- Partially close the tool until the seal is held in place and adjust the position.
- Close the tool until the RATCHET RELEASES.
- Remove the tool from the seal.

ATTENTION!

To release the ratchet mechanism, push the trigger in the direction indicated by the arrow. (5)

HOW TO ADJUST

It is sometimes necessary to adjust the crimp force.

1. Remove the allen key bolt from the eccentric axle.
2. Lift off the toothed lock washer.
3. Turn the axle in the proper direction to loosen or tighten tool adjustment. Maximum tightness is accomplished when flat surface of axle faces the locking tooth.
4. Replace lock washer and bolt.
5. Check preload against factory specification.

MAINTENANCE

It is recommended that each operator of the tool be made aware of- and responsible for- following these maintenance steps:

- Remove dust, moisture, and other contaminants with a clean brush, or a soft, lint-free cloth. Do NOT use objects that could damage the tool.
- Make certain all pins, pivot points, and bearing surfaces are protected with a THIN coat of any good SAE No.20 motor oil. Do NOT oil excessively.
- When the tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies and store the tool in a clean, dry area.

GUARANTEE

This tool is for crimping purposes only.

The tool is made only of the best quality materials and all vital components are long life tested for maximal and long life endurance.

All functional parts have passed several tests.

All tools are guaranteed to be free of manufacturing defects for a period of one year.

Should such a defect occur, we will repair or exchange the tool free of charge, but of course this will not be applicable to neglect, misused or accidentally damaged tools.